


THIS PLAN IS
AN AS-BUILT
DOCUMENT TO
BE USED TO
DOCUMENT THE
EXISTING SPACE.
THIS DOCUMENT
DOES NOT
DETERMINE
SPACES
COMPLIANCE
WITH EXISTING
BUILDING CODES.

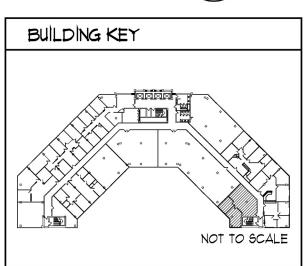



TRANSWESTERN®

706 2nd Avenue South 100 Baker Building Minneapolis, MN 55402 (612) 343-4200 AS-BUILT FLOOR PLAN

SUITE 950 SOUTHGATE OFFICE PLAZA 5001 W. 80TH ST. BLOOMINGTON, MN DRAWN BY: GDT DATE: 03.11.04

A-1